




Part # TABB5005

1955-57 Chevrolet 2 Door Hardtop & Sedan
Full Insulation and Sound Dampening Kit

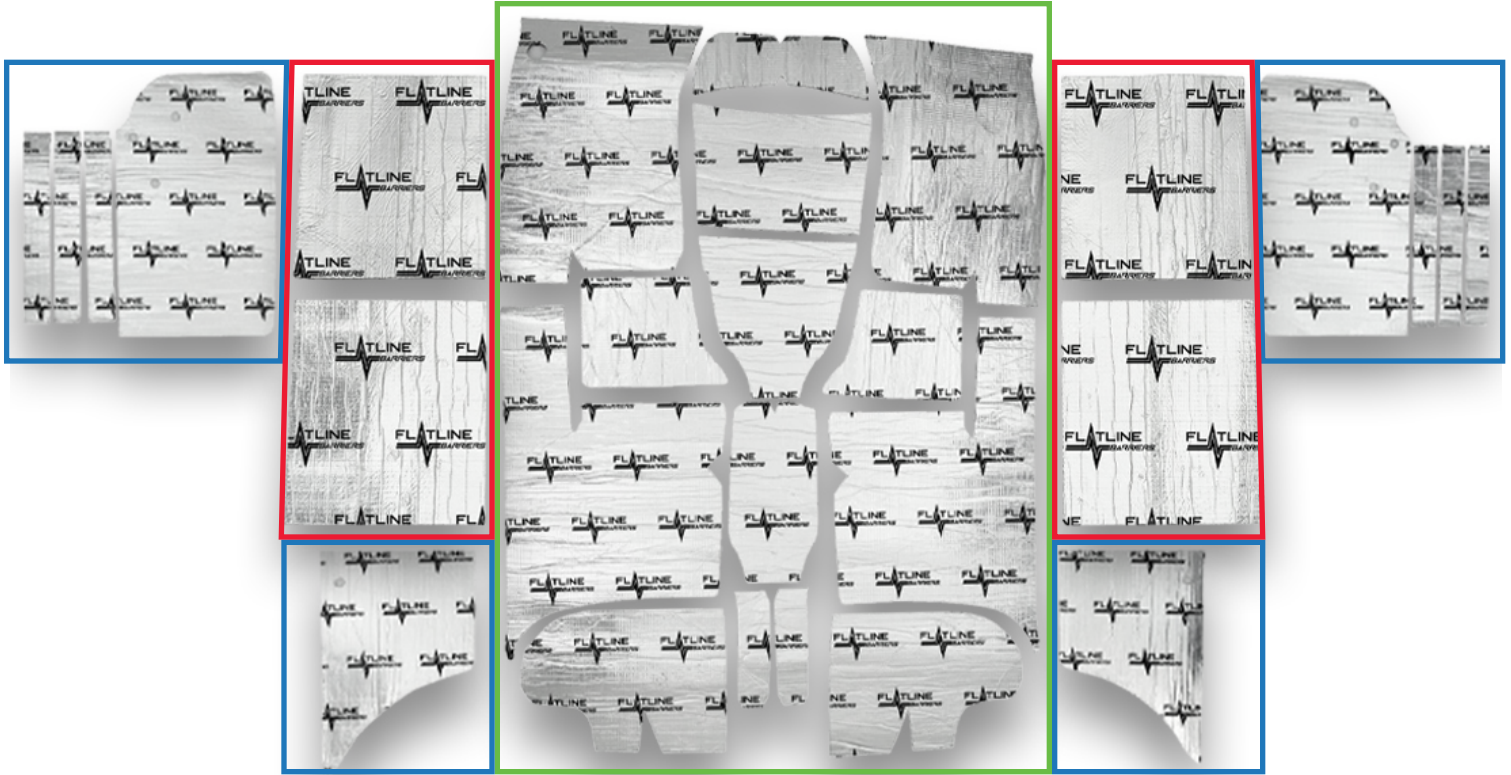

TABB5003 - 1955-57 Chevrolet 2 Door Hardtop & Sedan Door / Quarter Panel Insulation and Sound Dampening Kit

TABB5001 - 1955-57 Chevrolet 2 Door Hardtop & Sedan Roof Insulation and Sound Dampening Kit

TABB5002 - 1955-57 Chevrolet 2 Door Hardtop & Sedan Floor Insulation and Sound Dampening Kit

Installation Directions:

1. Clean any dirt, debris, or grime from the intended installation area using a degreasing agent.
2. Allow intended installation area adequate time to dry.
3. Remove the kit from its packaging, and dry fit the components allowing you to see exactly how the product will be placed for final installation.
4. Now you are ready to install. Remove the protective layer exposing the adhesive on your first piece applying it to its final position, using light pressure.
5. Repeat step 4 for each individual component until the full kit is installed.

***Note:** Flatline Barriers will NOT adhere to rubberized undercoating.

For further information please contact sales@flatlinebarriers.com